

BA-1200 kit contains (one of each):



BA-1200 Biologic Pro is designed to disperse beneficial bacteria, nourishing your environment and supporting your indoor cleanliness using a continuous flow of Enviro-Biotics®.

Specs:

Power in	12V DC 2A
Plug	DC Jack
Energy consumption	
Power (compressor on)	15w
Standby	0.5w
Panel	
Display	20x4 STN Blue LCD
Touch panel	5 Channel Capacitive Touch Sensor
Power supply	
INPUT AC PLUG	EU/US
Input-	100-240V AC 0.6A Max
Frequency	50/60Hz
Output-	12VDC 2A 24W
DC cable	1.5M
DC connector	DC Jack: 2.1mm

IMPORTANT SAFETY INSTRUCTIONS:

Warning:

When using electric products, basic precautions should always be followed, including the following:

- Read all the instructions before using the product.
- To reduce the risk of injury, close supervision is necessary when a product is used near children.
- Do not put fingers or hands into the product.
- Do not repair or modify the unit.
- Do not alter the plug in any way. Do not use if the power cord or plug is damaged or the connection to the wall outlet is loose.
- Only use the cord provided by betterair.
- Do not damage, break, forcefully bend, pull, twist, bundle, coat, pinch, or place heavy objects on the power cord.
- Remove the power plug from the outlet before cleaning the unit. When removing the power plug, grasp by holding the plug itself, never hold by the cord.
- Do not handle the power plug with wet hands.
- Clean the unit with dry fabric, do not use detergent to clean the unit.
- Do not use the unit on its side.

KEEP OUT OF REACH OF CHILDREN

CAUTION: Do not place directly under lights or other heat sources over 55 Celsius (130 Fahrenheit) Damage to the BA-1200 may occur

CAUTION: The appliance shall be mounted on the wall only. It is not intended to be used on surface such as the floor or table

SAVE THESE INSTRUCTIONS
CONTACT US:
WWW.BETTER-AIR.COM

VER 1.2.1



Quick Start Installation Guide


Biologic PRO BA- 1200



Pre Installation

Turn on the device by Connecting your device to the provided power supply. Once connected, the device display will be ready for initial setup.

Menu options: (navigation and selection of items will be done by using the navigation arrows).

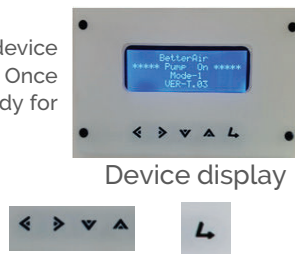

1. **Device setting:** Press "enter icon" to access **setup mode**.

1.1 **Date & time setting:** Press enter and use the arrows to adjust date and time. Press enter to save. press left arrow to return to setup menu.

1.2 **Wi-Fi setting :** press the down arrow then press enter to access wifi settings. Default will be wifi "on" - press enter to save wifi on status or press up arrow to turn wifi off . Press down arrow to turn wifi on. After wifi on is saved - device will scan available network (enter password if required). press enter to save wifi setting. press left arrow to return to setup menu.

1.3 **Installation type :** HVAC or Aerial dispersion type.

Select the preferred installation type using the down arrow. Press enter to save your selection and return to menu.

1.4 Refill Size Selection

Please select the preferred refill size as follows, using the down arrow. 500ml (Default) or 250ml. Press enter to save your selection.

Exit the setup mode using the down arrow. "Esc" will appear - press enter to return to main menu.

HVAC program setup

Selection of program depends on desired coverage area and frequency of refills replacement Consult betterair support to optimize your implementation

Program	Refill duration	How to program
Program 1	1 month	Default
Program 2	2 months	press the up arrow once
Program 3	3 months	press the up arrow twice
Program 4	4 months	press the up arrow 3 times
Program 5	5 months	press the up arrow 4 times
Program 6	6 months	press the up arrow 5 times

Installation Instructions

General:

-The wall must be capable of holding a weight up to 20 KG/ 44 lbs. The unit must be kept leveled in upright position,

-Make sure that there is an electric outlet in proximity to installation for the electric cord to reach.

-It is recommended that the product will be Mounted on a min. 0.5 Inch (1.3 cm) width plywood board ,

HVAC mode installation

Step 1

Using the sticker provided (2), mount the BA-1200 device to the wall near the HVAC air duct .

Step 2

Drill a hole in the air duct above the air handler and insert the silver tube (6) in the direction of the air flow. (see figure 1). Make sure the blue hose (5) is free from knots or obstructions for optimal airflow.

Secure and seal the silver metal plate to the air duct



Figure 1

Aerial program setup

Program	Duration	Refill size	Coverage area
Program 1	3 months	250 ml	250 sqm / 2500 sqft
		500 ml	500 sqm / 5000 sqft
Program 2	6 months	250 ml	250 sqm / 2500 sqft
		500 ml	500 sqm / 5000 sqft

Press enter to save your chosen program. Press down arrow to return to main menu then press enter.

Use the down arrow to navigate

1.5 General Information

1.5.1 Device ID

1.5.2 Refill ID

Aerial dispersion mode installation (up to 500 sqm/5000 sqft.)

For aerial dispersion, using the sticker provided (2), mount the BA-1200 device to the wall in the intended treatment area, connect the aerial add-on (4) to the dispersal bolt on top of your unit. (figure 2)

*It is not advised to place the BA-1200 near an open door or a window that leads outdoor in order to obtain maximum coverage indoors



Figure 2

Refill installation

To insert the Enviro-Biotics® refill bottle: Always shake the bottle well. Remove the bottle cap. Open the door of the BA-1200 unit, pull out the bottle adapter and connect the bottle until well secured. Slide the adapter with the bottle back to the unit. Plug in the BA-1200 to the power supply

Adapter inserted



Adapter removed

Product details and re-order info:

Product	BA-1200 Kit	BA1200 refill 500	BA1200 refill 250
SKU	30202	30204	30203
EAN	4897059130415	4897059130439	4897059130422
L x W x H (cm)	32x29x50	7x18	7x12
weight	5.8 KG	0.5 L	0.25 L